


# IONOS Configure GUI – ICG Troubleshooting VCP




## Win XP/VISTA/7: Activating the VCP

Go to Start->Control Panel

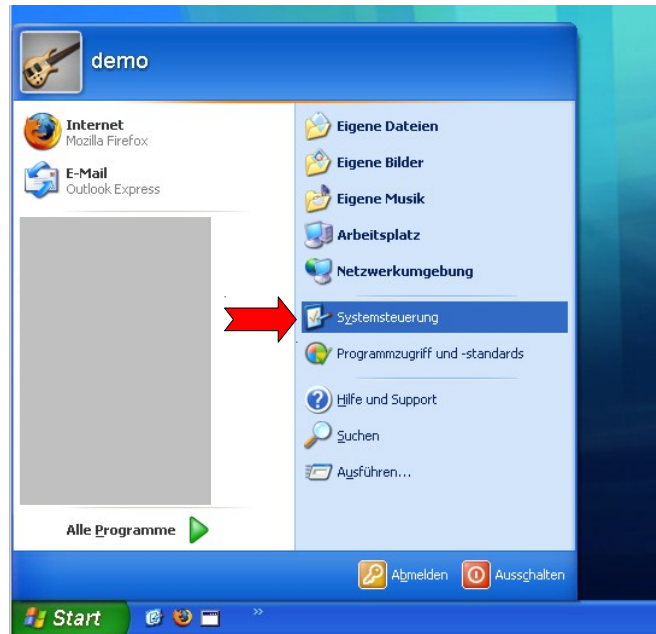


Tip: If there is no entry „System“ in the control panel, switch to classic view.

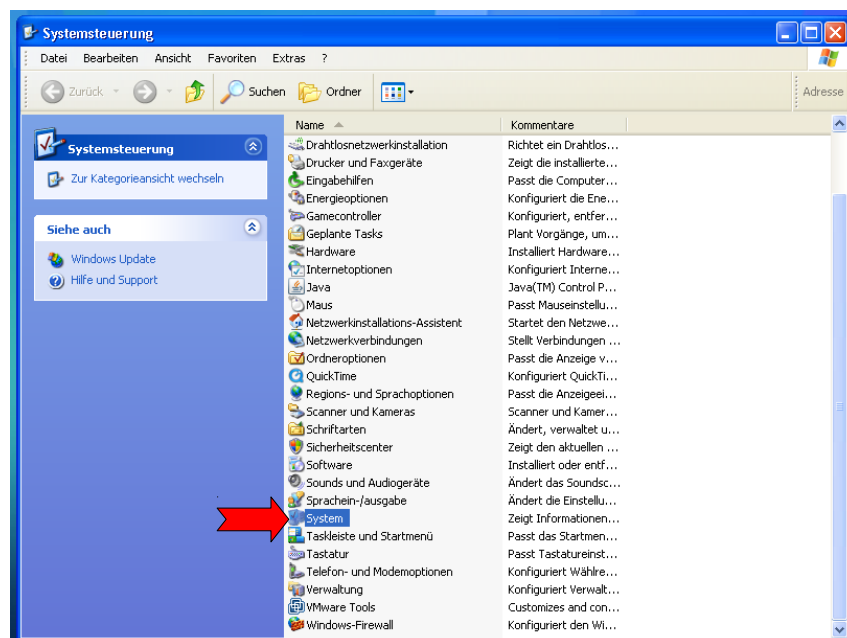


# IONOS Configure GUI – ICG Troubleshooting VCP




Doubleclick on „System“ and select the Tab „Hardware“

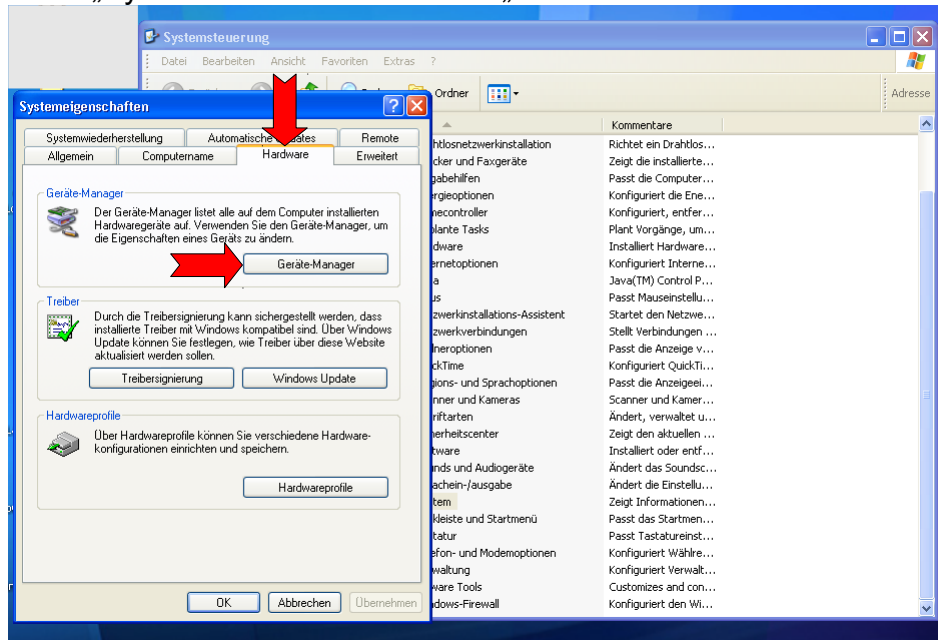

Open the „Hardware Manager“ and Doubleclick on „Serial Converter B“.

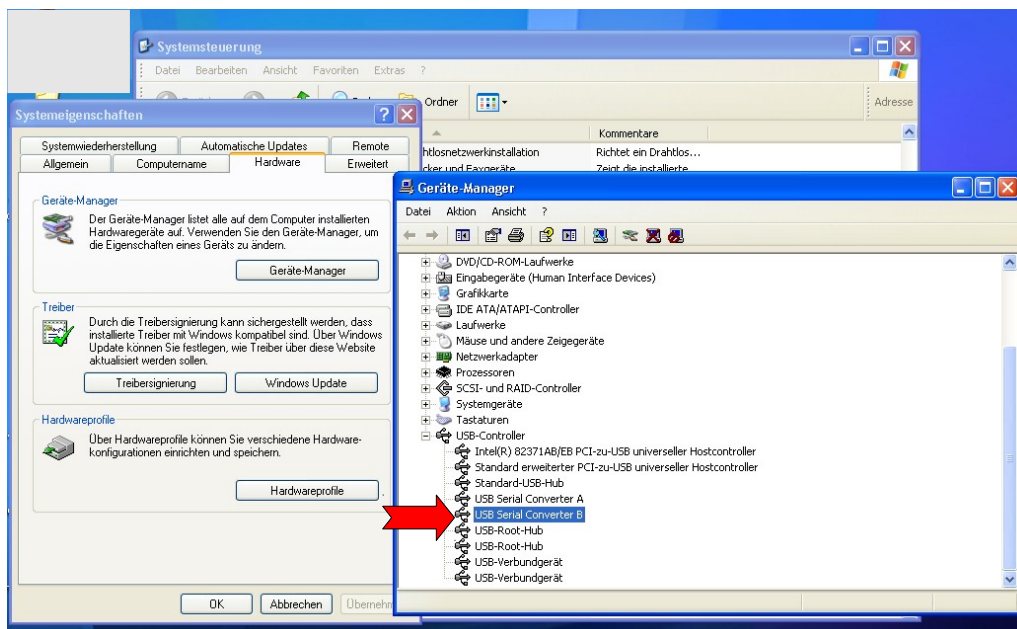

# IONOS Configure GUI – ICG Troubleshooting VCP

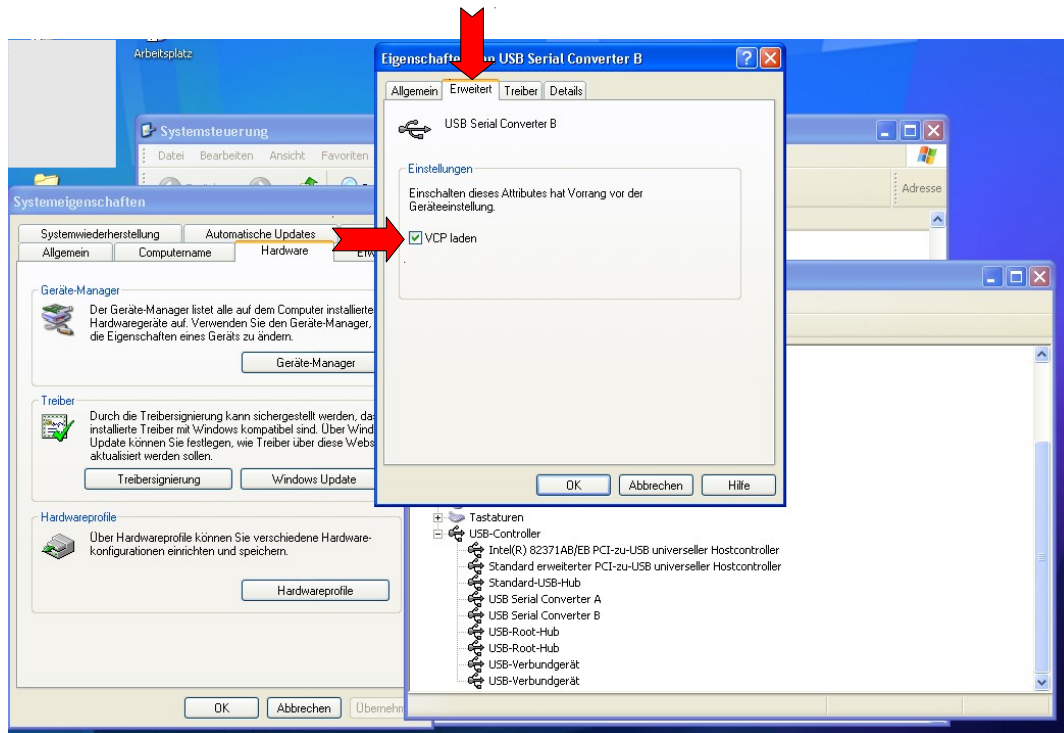

Now activate the VCP with the checkbox (in the tab “Advanced”).  
It is necessary to unplug and replug the USB cable of the HDR-60 Board.  
Sometimes it might be necessary to reboot, too.

There should be a new serial interface (e.g. COM13 or similar).